
SMARTLAB

16 CHANNELS RELAY OUTPUT/16 CHANNELS PHOTO ISOLATOR INPUT ADAPTER.
8 CHANNELS RELAY OUTPUT/8 CHANNELS PHOTO ISOLATOR INPUT ADAPTER.
OPERATION MANUAL

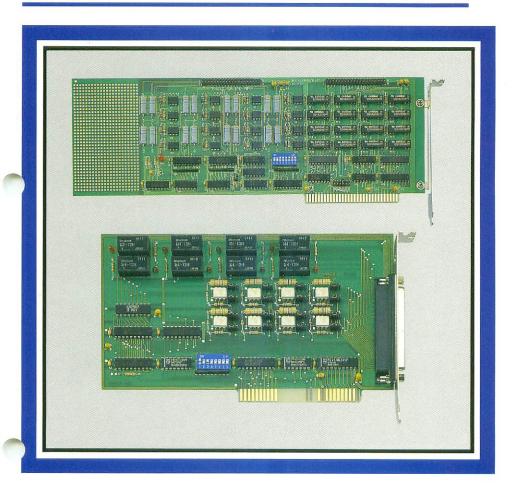

SMARTLAB

PART 1:
16 CHANNELS RELAY OUTPUT/
16 CHANNELS PHOTO ISOLATOR
INPUT ADAPTER
PART 2:
8 CHANNELS RELAY OUTPUT/
8 CHANNELS PHOTO ISOLATOR
INPUT ADAPTER
16 CHANNELS RELAY OUTPUT/
16 CHANNELS PHOTO
ISOLATOR INPUT ADAPTER
OPERATION MANUAL
CONTENTS:
CHAPTER 1. Introduction1-1
CHAPTER 2. Hardware Configuration1-3
APPENDIXES:
a. Warranty Information1-11
b. Data Sheet1-14
c. Address Setting1-21

d. Programming Guide.....1-25

CHAPTER 1 INTRODUCTION

The 16 channels relay output / photo isolato input adapter provides relay output functions and photo isolator input functions. The relay output part provides 16 relays to drive 16 different output channels. Each relay channel can be used to control ON / OFF of external devices, to drive external high power relays, to activate alarms ... etc.

The photo isolator input part provides 16 photo couple digital input channels, which allow the input signals to be completely floated and prevent the ground loop.

The features of 16 channels relay output / 16 channels photo isolator input adapter are:

- * Support 16 relay output channels and 16 photo couple input channels.
- * Max contact rating for relay: 150V/DC 1AMP.
- * Response time for relay: 1 ms minimum.
- * Contact resistance for relay: 0.2 OHM maximum.

- * Life expectancy for relay: 100 million operation at signal level load.
- * Allow the photo input signals to be completely floated and prevent the ground loops.
- * Input response time: 100us minimum.
- * Input voltage: 45VDC maximum for each isolated input.

The package contains:

- * 16 channels relay output / 16 channels photo couple input adapter.
- * User's manual.

CHAPTER 2. HARDWARE CONFIGURATION

 
Before you use the 16 channels relay output / 16 channels photo couple input adapter, you must ensure that the I/O address is set correctly, and set IRQ that you need. Observe the figure in the follows, the proper settings for the 16 channels relay output / 16 channels photo couple input adapter is described in the following.

AS RELAY RELAY • 245245 74.5273 34 574.566 4 5 AS RELAY A S RELAY ASS RELAY ASS RELAY RELAY OUTPUT JP2 AS RELAY AS MELAY ASS MELAY 107 E TO CATA OF SE SE PHOTO/RELAY : + 5 74LS273 1 2 741506 S≪ 7485689 27415125 PHOTO ISOLATE INPUT 7415240 JP1 ‡ 5 74LS30 7415240 2 74523

DECISION-COMPUTER International Co., Ltd.

2.1 Switch and Jumper Settings

1. I/O address



DIP switch is used to set base I/O address, you may set I/O address ranges from 000H to 3FCH increments of 4. Observe figure above, to set the switch ON means 0 and set the switch OFF means 1. SW1 corresponds to address A9, SW2 corresponds to address A8, etc. The figure above is set to 1AOH.

Base Address + 0 :
Relay output channel 1 to 8.

Base Address + 1 :
Relay output channel 9 to 16.

Base Address + 0 :
Photo input channel 1 to 8.

Base Address + 1 :
Photo input channel 9 to 16.

2. IRQ setting

•	•	•	•	•	•
٠	•	•	•	•	٠
I R	I R	I R	R	\mathbf{R}	R
	Q	Q	Q	Q	Q 7
Q 2	Q 3	4	5	6	7

The jumper is used to set IRQ for photo couple input, if you need not use IRQ, please do not short the jumper.

2.2 Hardware Installation

Your 16 channels relay output / 16 channels photo couple input adapter is designed to inserted in any available slot in your computer. In order to gain access to the expansion slots, follow the steps listed in the followings.

- 1. Set the switch and jumper.
- 2. Connect the expansion flat cable to 40 pin connector.
- Turn off all power of your computer and all peripheral devices before

installing your adapter.

- 4. Remove the cover of the computer.
- 5. Insert your preconfigured adapter into any available slot. Make sure your I/O card is firmly seated in the chosen slot.
- 6. Replace the cover of the computer.

2.3 Function Description

1. Relay output

(Base address + 0) is used to control channel 1 to 8, (Base address + 1) is used to control channel 9 to 16. When set the correspond bit to 1, it turns on the relay, this means relay is set to close state, when set the correspond bit to 0, it turns off the relay, this means relay is set to open state.

2. Photo couple input

(Base address + 0) is used to control channel 1 to 8, (Base address + 1) is used to control channel 9 to 16. When input voltage range from 0 to 2 VDC, then input circuit turns off and its correspond bit will be set

to 0, when input voltage range from 3 to 45 VDC, then input circuit turns on and its correspond bit will be set to 1. Do not input signal more than 50 VDC, otherwise the circuit will overload.

2.4 Pin Assignments

1. connector 1 (J1)

Pin	Description
1, 2 3, 4 5, 6 7, 8 9,10 11,12 13,14 15,16 17,18 19,20 21,22 23,24 25,26 27,28 29,30 31,32 33,34 35,36 37,38 39,40	relay channel 1 relay channel 2 relay channel 3 relay channel 4 relay channel 5 relay channel 6 relay channel 7 relay channel 8 relay channel 9 relay channel 10 relay channel 11 relay channel 11 relay channel 12 relay channel 13 relay channel 14 relay channel 15 relay channel 15 relay channel 16 GND DC +5V DC +12V GND

2. connector 2 (J2)

Pin	Description
1	Input channel 1-
2	Input channel 1+
3	Input channel 2-
2 3 4	Input channel 2+
5	Input channel 3-
6	Input channel 3+
7	Input channel 4-
8	Input channel 4+
9	Input channel 5-
10	Input channel 5+
11	Input channel 6-
12	Input channel 6+
13	Input channel 7-
14	Input channel 7+
15	Input channel 8-
16	Input channel 8+
17	Input channel 9-
18	Input channel 9+
19	Input channel 10-
20	Input channel 10+
21	Input channel 11-
22	Input channel 11+
23	Input channel 12-
24	Input channel 12+
25	Input channel 13-
26	Input channel 13+
27	Input channel 14-
28	Input channel 14+
29	Input channel 15-
30	Input channel 15+
L	

31	Input channel 16-
32	Input channel 16+
33	GND
34	GND
35	DC +5V
36	DC +5V
37	DC +12V
38	DC +12V
39	GND
40	GND
L	

APPENDIX A WARRANTY INFORMATION

A.1 Copyright

Copyright 1994,1995 DECISION COMPUTER INTERNATIONAL CO., LTD. all rights reserved. No part of SmartLab software and manual may be reproduced, transmitted, transcribed, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of DECISION COMPUTER INTERNATIONAL CO., LTD.

Each piece of SmartLab package permits user to use SmartLab only on a single computer, a registered user may use the program on a different computer, but may not use the program on more than one computer at the same time.

Corporate licensing agreements allow duplication and distribution of specific number of copies within the licensed institution. Duplication of multiple copies is not allowed except through execution of a licensing agreement. Welcome call for details.

A.2 Warranty Infromation

SmartLab warrants that for a period of one year from the date of purchase (unless otherwise specified in the warranty card) that the goods supplied will perform according to the specifications defined in the user manual. Furthermore that the SmartLab product will be supplied free from defects in materials and workmanship and be fully functional under normal usage.

In the event of the failure of a SmartLab product within the specified warranty period, SmartLab will, at its option, replace or repair the item at no additional charge. This limited warranty does not cover damage resulting from incorrect use, electrical interference, accident, or modification of the product.

All goods returned for warranty repair must have the serial number intact. Goods without serial numbers attached will not be covered by the warranty.

Transportation costs for goods returned must be paid by the purchaser. Repaired goods will be dispatched at the expense of SmartLab.

To ensure that your SmartLab product is covered by the warranty provisions, it is necessary that you return the Warranty card.

Under this Limited Warranty, SmartLab's obligations will be limited to repair or replacement only, of goods found to be defective as specified above during the warranty period. SmartLab is not liable to the purchaser for any damages or losses of any kind, through the use of, or inability to use, the SmartLab product.

SmartLab reserves the right to determine what constitutes warranty repair or replacement.

Return Authorization: It is necessary that any returned goods are clearly marked with an RA number that has been issued by SmartLab. Goods returned without this authorization will not be attended to.

APPENDIX B DATA SHEET

6-Pin DIP Optoisolators Transistor Output

These devices consist of a gallium arsenide infrared emitting diode optically coupled to a monolithic silicon phototransistor detector.

- Convenient Plastic Dual-In-Line Package
- High Current Transfer Ratio 100% Minimum at Spec Conditions
- Guaranteed Switching Speeds
- High Input-Output Isolation Guaranteed 7500 Volts Peak
- UL Recognized. File Number E54915 A)
- VDE approved per standard 0883/6.80 (Certificate number 41853), with additional approval to DIN IEC380/VDE0806, IEC435/VDE0805, IEC65/VDE0860, VDE0110b, covering all other standards with equal or less stringent requirements, including IEC204/VDE0113, VDE0160, VDE0832, VDE0833, etc. AN
- IEC204√DE0113, VDE0160, VDE0832, VDE0833, etc.

 ◆ Meets or Exceeds All JEDEC Registered Specifications

 B83
- Special lead form available (add suffix "T" to part number) which satisfies VDE0883/ 6.80 requirement for 8 mm minimum creepage distance between input and output solder oads.
- Various lead form options available. Consult "Optoisolator Lead Form Options" data sheet for details.

MAXIMUM RATINGS (TA = 25°C unless otherwise noted)

Rating	Symbol	Value	Unit
NPUT LED			
Reverse Voltage	VR	6	Volts
Forward Current — Continuous	lF	60	mA
LED Power Dissipation @ T _A = 25°C with Negligible Power in Output Detector Derate above 25°C	PD	120	mW
OUTPUT TRANSISTOR	1	1.41	mW/°C
Collector-Emitter Voltage	VCEO	30	Volts
Emitter-Base Voltage	VEBO	7	Volts
Collector-Base Voltage	VCBO	70	Volts
Collector Current — Continuous	lc lc	150	mA
Detector Power Dissipation @ TA = 25°C with Negligible Power in Input LED Derate above 25°C	PD	150 1.76	mW/°C
OTAL DEVICE	<u> </u>	1 1.70	
Isolation Source Voltage (1) (Peak ac Voltage, 60 Hz, 1 sec Duration)	V _{ISO}	7500	Vac
Total Device Power Dissipation @ T _A = 25°C Derate above 25°C	PD	250 2.94	mW mW/°C
Ambient Operating Temperature Range	TA	-55 to +100	℃
Storage Température Range	T _{stg}	- 55 to + 150	°C
Soldering Temperature (10 seconds, 1/16" from case)	- ·	260	°C

 
⁽¹⁾ Isolation surge voltage is an internal device dielectric breakdown rating.

For this test, Pins 1 and 2 are common, and Pins 4, 5 and 6 are common.

4N35 4N36 4N37

6-PIN DIP OPTOISOLATORS TRANSISTOR OUTPUT






ELECTRICAL CHARACTERISTICS (TA = 25°C unless otherwise noted)

	Sym	bol	Min	Тур	Max	Unit		
INPUT LED								
Forward Voltage (IF = 10 mA)			5°C .		0.8 0.9 0.7	1.15 1.3 1.05	1.5 1.7 1.4	V
Reverse Leakage Cu	rrent (VR = 6 V)		I _R		_	_	10	Ац
Capacitance (V = 0	V, f = 1 MHz)		C,	, 1	_	18	_	pF
OUTPUT TRANSISTO	-							
Collector-Emitter Da	rk Current (V _{CE} = 10) (V _{CE} = 30)	V, T _A = 25°C) V, T _A = 100°C)	CEO	_		1 _	50 500	πA μA
Collector-Base Dark	Current (V _{CB} = 10 V)	T _A = 25°C T _A = 100°C	Ісво	_		0.2 100	20	nA
Collector-Emitter Bre	akdown Voltage (IC =	1 mA)	V(BR)CEO	30		45	_	٧
Collector-Base Breal	down Voltage (IC = 1	00 μΑ)	V(BR)CBO	70		100	_	v
Emitter-Base Breakd	own Voltage (IE = 100) μΑ)	V(BR)EBO	7		7.8		v
DC Current Gain (IC	= 2 mA, V_{CE} = 5 V)		hFE	_		400		_
Callector-Emitter Ca	pacitance ($f = 1 MHz$,	VCE = 0)	CCE			7		pF
Collector-Base Capa	citance (f = 1 MHz, VC	(B = 0)	ССВ	_		19		pF
Emitter-Base Capaci	tance (f = 1 MHz, VEB	= 0)	CEB			9		pF
COUPLED								
Output Collector Cur (IF = 10 mA, VCE		T _A = 25°C T _A = -55°C T _A = 100°C	lc	10 4 4		30 — —	-	mA
Collector-Emitter Sa	turation Voltage (IC =	5 mA, IF = 10 mA)	VCE(sat)	_		0.14	0.3	V
Turn-On Time			ton	-		7.5	10	μs
Turn-Off Time	(IC = 2 mA, V	/CC = 10 V,	t _{off}	-		5.7	10	
Rise Time	$R_L = 100 \Omega$,	Figure 11)	tr	_		3.2	_	
Fall Time		tf			4.7	_		
Isolation Voltage (f = 60 Hz, t = 1 sec)			VISO	750	0	_		Vac(pk)
Isolation Current {V _{I-O} = 3550 Vpk}			liso	=		_ _ 8	100 100 100	μΑ
Isolation Resistance	(V = 500 V)		RISO	101	1	_		U
Isolation Capacitano	e(V = 0 V, f = 1 MHz))	C _{ISO}	_		0.2	2	pF

TYPICAL CHARACTERISTICS

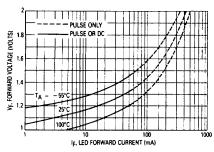



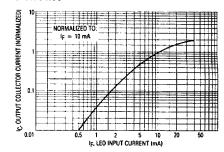


Figure 2. Output Current versus Input Current

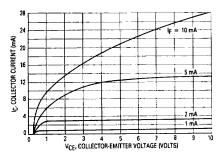


Figure 3. Collector Current versus Collector-Emitter Voltage

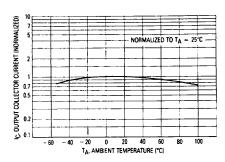


Figure 4. Output Current versus Ambient Temperature

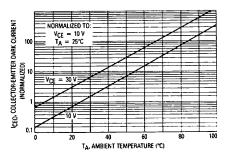


Figure 5. Dark Current versus Ambient Temperature

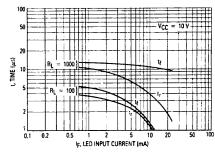


Figure 6. Rise and Fall Times

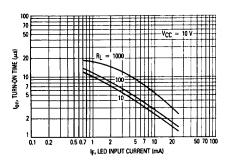


Figure 7. Turn-On Switching Times

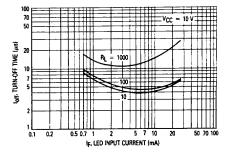


Figure 8. Turn-Off Switching Times

SPECIFICATION



MINIATURE MOULDED RELAY FOR PCB

1 form A, UL File number: E69913 (M) (A card)


D31A3100

 
Dual in Line red relay

 
main ratings

maximum switching voltage maximum switching current maximum carrying current contact rating

200 VDC 0,5 Amps 1 Amps 10 W

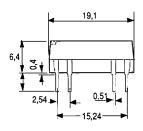





one step = 2,54 mm

control data

Rated	Coil resistance	Must operate	Must drop-out	Maximum	Power
voltage		voltage	voltage	operating	consumption
VDC _	Ω±10%	VDC	VDC	voltage	mW
5	500	3,7	1	360% of nominal	50

electrical data

contact material initial contact resistance dielectric strength -across contacts -between coil and contacts insulation resistance -across contacts -between coil and contacts max. switching-on time including bounces max. switching-off time life expectancy: mechanical electrical at rated load


rhodium
≤ 200 mΩ
200 VDC
750 VAC
$10^{10}\Omega$
$10^{10} \Omega$
0,5 ms
0,1 ms
10 8 operations


physical data


operating temperature storage temperature weight shocks vibrations

-40 to +65 °C -40 to +85 °C 2 g 50 g 20 g edition 18-3-94


5. 10 6 operation

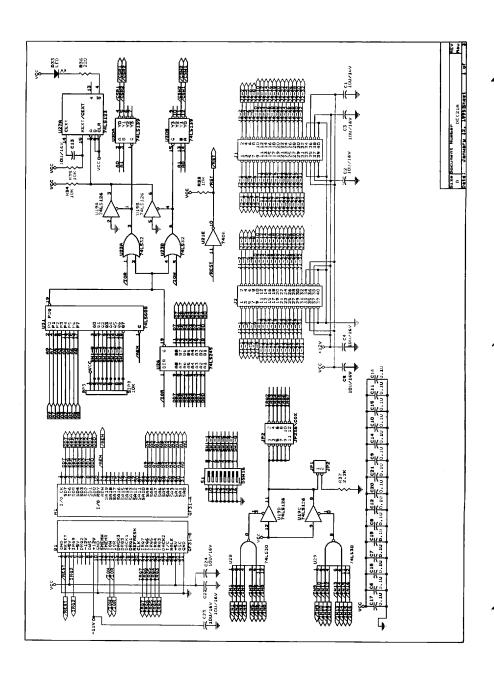


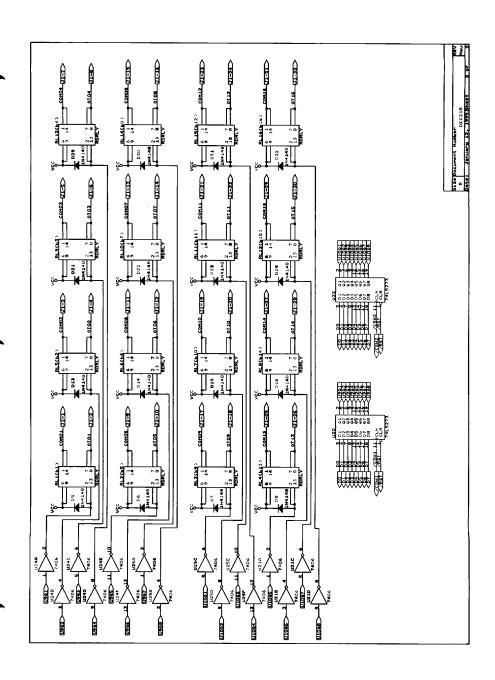


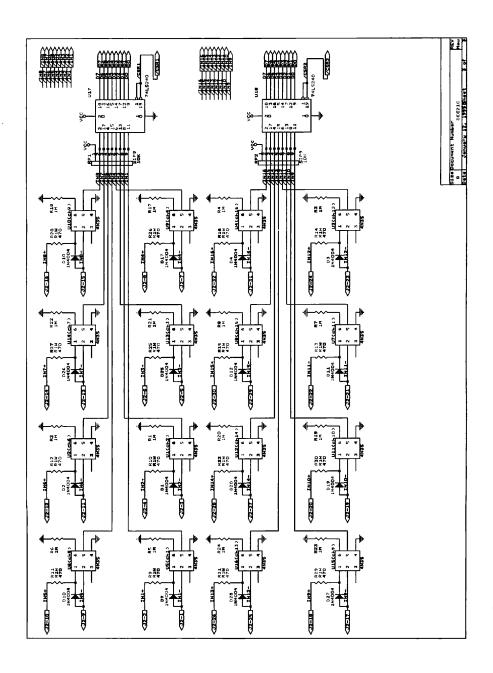

APPENDIX C ADDRESS SETTING

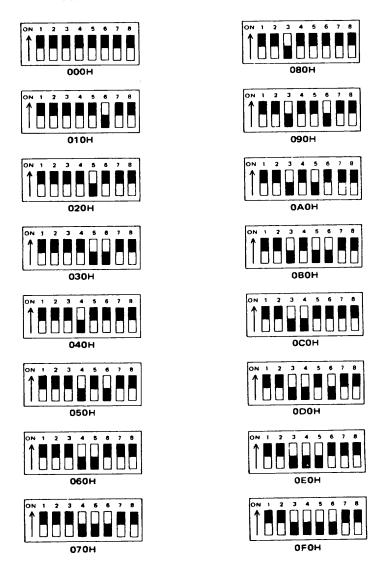


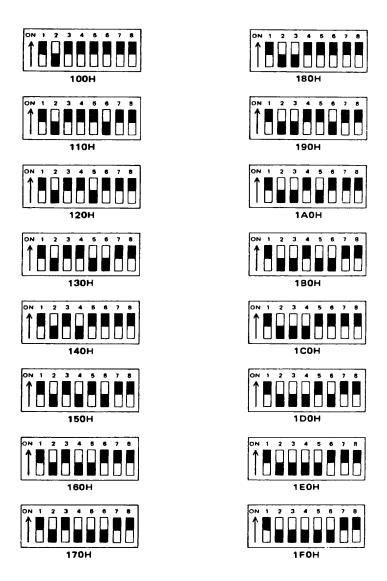

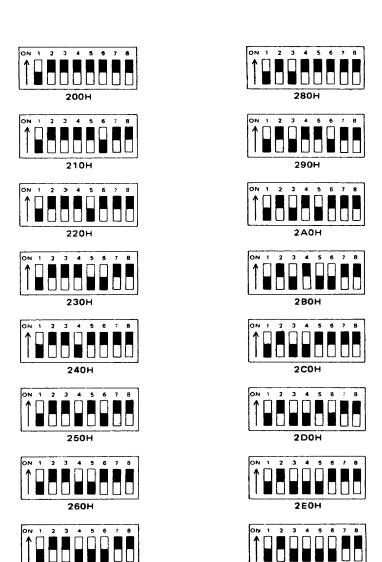

270H

2F0H

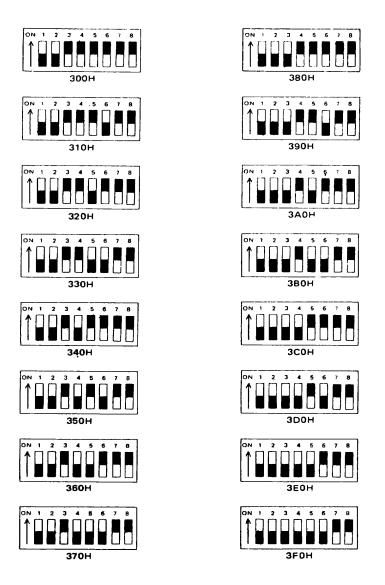

APPENDIX D PROGRAMMING GUIDE

In this APPENDIX, we will define the I/O format and how to use it.

D.1 Relay control group 1 output format

7	6	5	4	3	2	1	0	
RL8	RL7	RL6	RL5	RL4	RL3	RL2	RL1	


- 1. the address is (Base address + 0).
- 2. bit 0 control the relay channel 1, the pin 1 and pin 2 of J1 connector (J1-1 and J1-2) shows the output condition of channel 1.
- 3. When set bit 0 = "0", then J1-1 and J1-2 will be open.
- 4. when set bit 0 = "1", then J1-1 and J1-2 will be close.
- 5. bit 0 to bit 7 represents relay channel 1 to channel 8.

D.2 Relay control group 2 output format

7	6	5	4	3	2	1	0
RL16	RL15	RL14	RL13	RL12	RL11	RL10	RL9


- 1. the address is (Base address + 1).
- 2. bit 0 control the relay channel 9, the pin 17 and pin 18 of J1 connector (J1-17 and J1-18) shows the output condition of channel 1.
- 3. when set bit 0 = "0", then J1-17 and J1-18 will be open.
- 4. when set bit 0 = "1", then J1-17 and J1-18 will be close.
- 5. bit 0 to bit 7 represents relay channel 9 to channel 16.

 D.3 Photo isolate group 1 input format




- 1. the address is (Base address + 0).
- 2. bit 0 represents input condition of pin 1 and pin 2 of J2 connector (J2-1 and J2-2).

 
- 3. bit 0 to bit 7 represents input channel 1 to channel 8.
- 4. the input hardware configuration is



D.4 Photo isolate group 2 input format

 

 - 1. the address is (Base address + 1).
- 2. bit 0 represents input condition of pin 17 and pin 18 of J2 connector (J2-17 and J2-18).
- 3. bit 0 to bit 7 represents input channel 9 to channel 16.
- 4. the input hardware configuration is



8 CHANNELS RELAY OUTPUT/ 8 CHANNELS PHOTO ISOLATOR INPUT ADAPTER OPERATION MANUAL

CONTENT	S:		
CHAPTER	1.	Introduction	2-1
CHAPTER	2.	Hardware Configuration	2-3
APPENDIX	ES:	:	
a. Warrant	y Ir	nformation	2-11
b. Data Sh	eet		2-14
c. Address	Se	etting	2-16

Rev. Date: 1995 AUG. 28

CHAPTER 1 INTRODUCTION

The 8 channels relay output / photo isolator input adapter provides relay output functions and photo isolator input functions. The relay output part provides 8 relays to drive 8 different output channels. Each relay channel can be used to control ON / OFF of external devices, to drive external high power relays, to activate alarms ... etc.

The photo isolator input part provides 8 photo couple digital input channels, which allow the input signals to be completely floated and prevent the ground loop.

The features of 8 channels relay output / 8 channels photo isolator input adapter are:

- * Support 8 relay output channels and 8 photo couple input channels.
- * Max contact rating for relay: 120V AC/DC 1AMP.
- * Attraction time for relay: 3 ms.
- * Fall off time for relay: 2 ms.

- * Isolation resistance for relay: 100M OHM.
- * Life expectancy for relay: 100 million operation at signal level load.
- * Allow the photo input signals to be completely floated and prevent the ground loops.
- * Activation voltage: 17 to 28V or TTL level.
- * Address selectable.

The package contains:

- * 8 channels relay output / 8 channels photo couple input adapter.
- * User's manual.

 
CHAPTER 2 HARDWARE CONFIGURATION

Before you use the 8 channels relay output / 8 channels photo couple input adapter, you must ensure that the I/O address is set correctly. Observe the figure in the follows, the proper settings for the 8 channels relay output / 8 channels photo couple input adapter is described in the following.

DECISION-COMPUTER International Co., Ltd.

2.1 Switch and Jumper Settings

1. I/O address



DIP switch is used to set base I/O address, you may set I/O address ranges from 200H to 3FEH increments of 2. Observe figure above, to set the switch ON means 0 and set the switch OFF means 1. A9 is always set to 1, SW1 corresponds to address A8, SW2 corresponds to address A7, etc. The figure above is set to 2A8H.

Base Address + 0 :
Relay output channel 1 to 8.

Base Address + 1 :
Photo input channel 1 to 8.

2. Jumper setting

. . Jumper A

. . Jumper B

jumper A	jumper B	Signal
left	right	opto +, opto -
left	left	opto +, GND
right		opto + = TTL mode

The jumper A and jumper B are used to set isolate signal of photo input. When set left position of jumper A and right position of jumper B, the photo inputs are isolated, and you must use opto + and opto - signals. When set left position of jumper A and left position of jumper B, opto is connected to ground (GND), you only use opto + signal. When set right position of jumper A and set any position of jumper B, the opto + signal accepts TTL level.

2.2 Hardware Installation

Your 8 channels relay output / 8 channels photo couple input adapter is designed to inserted in any available slot in your computer. In order to gain access to the expansion slots, follow the steps listed in the followings.

- 1. Set the switch and jumper.
- 2. Connect the expansion cable to DB37 connector.
- Turn off all power of your computer and all peripheral devices before installing your adapter.
- 4. Remove the cover of the computer.
- 5. Insert your preconfigured adapter into any available slot. Make sure your I/O card is firmly seated in the chosen slot.
- 6. Replace the cover of the computer.


2.3 Function Description

1. Relay output

•	_	5					
RL8	RL7	RL6	RL5	RL4	RL3	RL2	RL1

(Base address + 0) is used to control channel 1 to 8. When set the correspond bit to 1, it turns on the relay, this means relay is set to close state, when set the correspond bit to 0, it turns off the relay, this means relay is set to open state.

 2. Photo couple input



(Base address + 1) is used to control channel 1 to 8, bit 0 to bit 7 represents input channel 1 to channel 8. Normally, when input voltage range from 17V to 28V, it means 1, otherwise below 17V is 0. When set to TTL mode, the corresponding bit will be set to 0 or 1 according to TTL level.

2.4 DB37 Connector Assignments

Pin	Description
20 21 22 23 24	relay channel 4, NO relay channel 4, COM relay channel 4, NC relay channel 5, NO relay channel 5, COM
25 26	relay channel 6, NO relay channel 6, COM
27 28 29	relay channel 7, NO relay channel 7, COM GND
30 31 32	opto channel 1, - opto channel 2, - opto channel 3, -
33 34	opto channel 4, - opto channel 5, -
35 36 37	opto channel 6, - opto channel 7, - opto channel 8, -

APPENDIX A WARRANTY INFORMATION

A.1 Copyright

Copyright 1994,1995 DECISION COMPUTER INTERNATIONAL CO., LTD. all rights reserved. No part of SmartLab software and manual may be reproduced, transmitted, transcribed, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of DECISION COMPUTER INTERNATIONAL CO., LTD.

Each piece of SmartLab package permits user to use SmartLab only on a single computer, a registered user may use the program on a different computer, but may not use the program on more than one computer at the same time.

Corporate licensing agreements allow duplication and distribution of specific number of copies within the licensed institution. Duplication of multiple copies is not allowed except through execution of a licensing agreement. Welcome call for details.

A.2 Warranty Information

SmartLab warrants that for a period of one year from the date of purchase (unless otherwise specified in the warranty card) that the goods supplied will perform according to the specifications defined in the user manual. Furthermore that the SmartLab product will be supplied free from defects in materials and workmanship and be fully functional under normal usage.

In the event of the failure of a SmartLab product within the specified warranty period, SmartLab will, at its option, replace or repair the item at no additional charge. This limited warranty does not cover damage resulting from incorrect use, electrical interference, accident, or modification of the product.

All goods returned for warranty repair must have the serial number intact. Goods without serial numbers attached will not be covered by the warranty.

Transportation costs for goods returned must be paid by the purchaser. Repaired goods will be dispatched at the expense of SmartLab.

 
To ensure that your SmartLab product is covered by the warranty provisions, it is necessary that you return the Warranty card.

Under this Limited Warranty, SmartLab's obligations will be limited to repair or replacement only, of goods found to be defective as specified above during the warranty period. SmartLab is not liable to the purchaser for any damages or losses of any kind, through the use of, or inability to use, the SmartLab product.

SmartLab reserves the right to determine what constitutes warranty repair or replacement.

Return Authorization: It is necessary that any returned goods are clearly marked with an RA number that has been issued by SmartLab. Goods returned without this authorization will not be attended to.

APPENDIX B DATA SHEET



FEATURES

- Ultra high Sensitivity
- Conforms to FCC Part 68 1500V Surge and Dielectric Strength 1000V AC
- DIL Pitch Terminals
- Fully sealed (immersion clearable)
- UL, CSA recognized
- · High Reliability bifurcated Contact

PHONICA

SPECIFICATIONS


□ Contacts

Arrangement		2 Form C		
Туре		Bifurcated Crossbar		
Material	Movable Contact Stationary Contact	Gold clad Silver-Palladium Alloy Gold clad Silver-Palladium Alloy		
Ratings (Resist	ive Load)	1A 24V DC / 0.5A 120V AC		
Max. Ratings (Resistive Load) Max. Switching Power Max. Switching Voltage Max. Switching Current		60W DC / 125VA AC 220V DC / 250V AC 2A DC/AC		
Min. Switching Load		0.01 mA 10mV DC (Reference Value)		
Expected Life (Min: Operations) Mechanical Electrical (Resistive Load)		100 million 0.5 million at 1A 24V DC 0.2 million at 0.5A 120V AC		
Contact Resistance		50 mΩ Max, at initial		


☐ Characteristics at 20°C (68°F)


- Characteriotics at 20 0 (001)		
Operate Time (at nominal Voltage) Release Time (at nominal Voltage)	Approx, 4.5 ms Approx, 1.5 ms	
Electrostatic Capacitance Between open Contacts Between Coil & Contacts Between Contact Poles	Approx. 0.7 pF Approx. 1.0 pF Approx. 0.9 pF	
Dielectric Withstand Vollage Between open Contacts Between Coil & Contacts Between Contact Poles	1000V AC for 1 minute 1000V AC for 1 minute 1000V AC for 1 minute	
Surge Withstand Voltage (FCC) Between open Contacts Between Coil & Contacts Between Contact Poles	1500V 1500V 1500V	
Insulation Resistance	1000 MΩ min. at 500V DC	
Vibration Resistance Functional Destructive	1.5 mm D.A. 10 to 55 Hz 5 mm D.A. 10 to 55 Hz	
Shock Resistance Functional Destructive	10 G (11 ms) 100 G (6 ms)	
Temperature Range	-40 to +90°C (-40 to +194°F) to +80°C for 300 mW Coil	
Weight	Approx. 4.5 g	

 - Telecommunication Equipment
- Office Equipment
- Security Alarm Systems
- Measuring instruments
- Medical Monitoring Equipment
- Audio Visual Equipment
- Flight Simulator
- Sensor Control




Relay Code	Nominal Voltage	Coil Resistance	Pick-Up Voltage	Drop-Out Voltage	Nominal Power Consumption	Maximum Continuous Voltage
nelay Code	V DC	Ω ± 10%	V DC	V DC	mW DC	V DC
M4-3H	3	60	2.1	0.15	150	7.5
M4-5H	5	167	3.5	0.25	150	12.5
M4-6H	6	240	4.2	0.3	150	15.0
M4-9H	9	540	6.3	0.45	150	22.5
M4-12H	12	960	8.4	0.6	150	30.0
M4-18H	18	1620	12.0	0.9	150	40.0
M4-24H	24	2880	16.8	1.2	200	52.9
M4-48H	48	7680	33.6	2.4	300	84.9
M4-3HA	3	45	2.1	0.3	200	6.5
M4-5HA	5	125	3.5	0.5	200	10.8
M4-6HA	6	180	4.2	0.6	200	13.0
M4-9HA	9	405	6.3	0.9	200	19.5
M4-12HA	12	720	8.4	1.2	200	26.5
M4-24HA	24	2880	16.8	2.4	200	52.9
M4-48HA	48	11520	33.6	4.8	200	103.9
M4-5HM	5	56	3.3	0.5	450	7.7
M4-6HM	6	80	4.0	0.6	450	9.2
M4-9HM	9	180	6.0	0.9	450	13.7
M4-12HM	12	320	8.0	1.2	450	18.3
M4-18HM	18	720	12.0	1.8	450	27.5
M4-24HM	24	1280	15.9	2.4	450	36.7
M4-48HM	48	5000	33.0	4.8	450	72.5

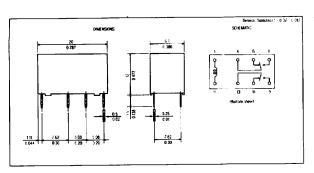


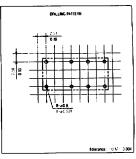



mm/inch

APPENDIX C ADDRESS SETTING

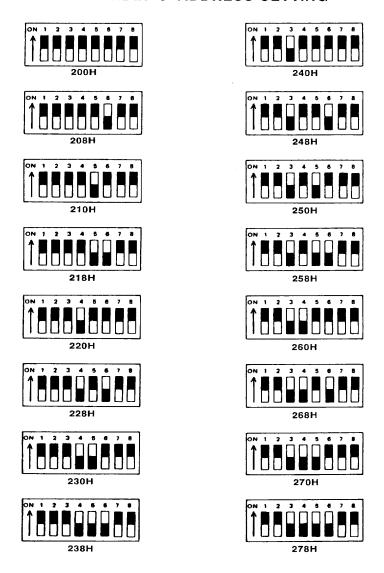

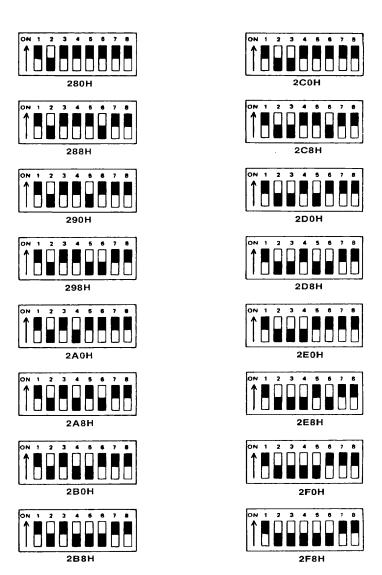

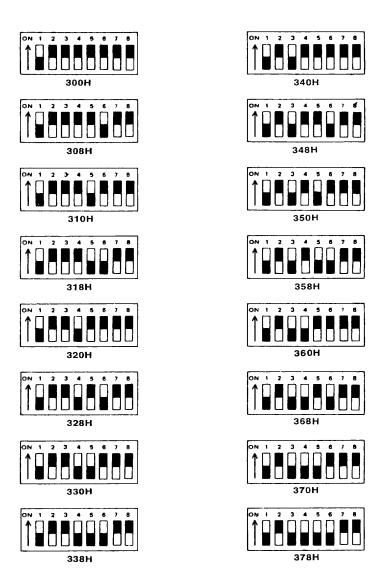

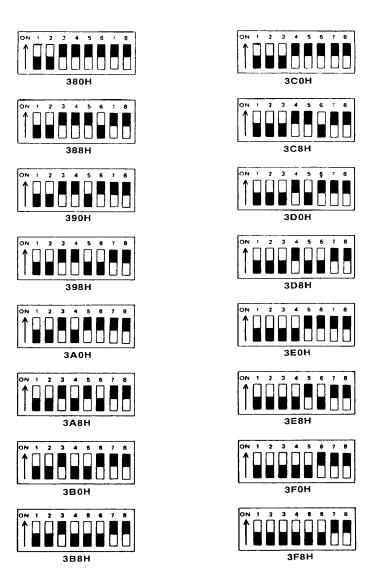

NOTE:		 	
NOTE:			
	NOTE:		